


All sizes come with (2) blanking panels per package

See table for parts that are applicable with each blanking panel size.

Blanking panel	Front and Rear Manager	Front Only Manager
NM1B	NM1	NMF1
NM2B	NM2	NMF2
NM3B	NM3	NMF3
NM4B	NM4	NMF4

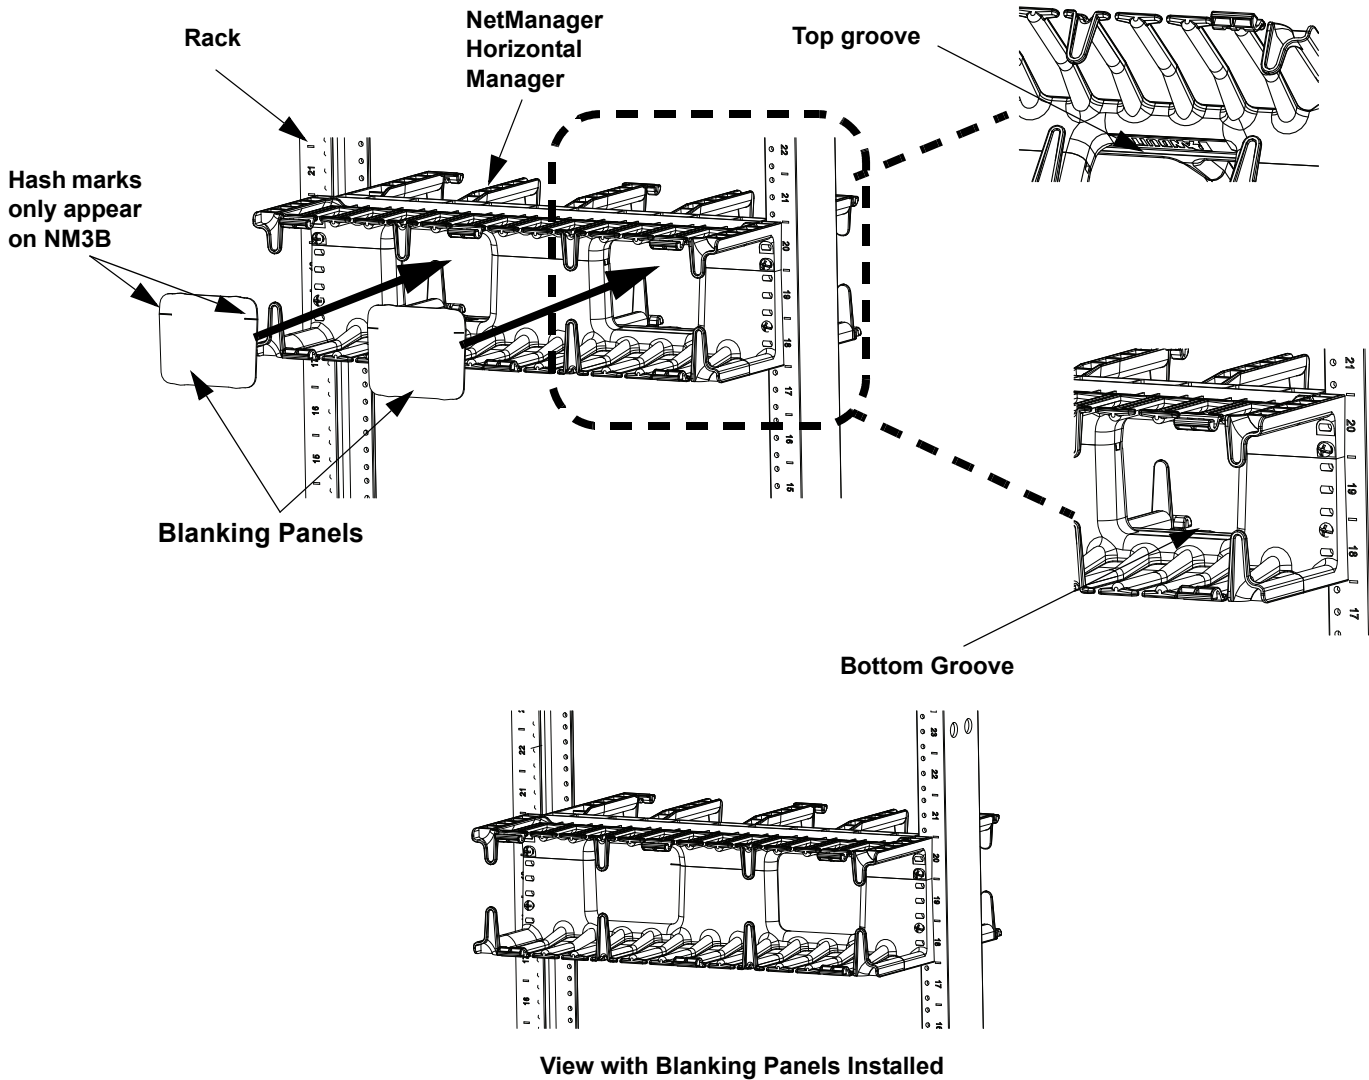

For Instructions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp